
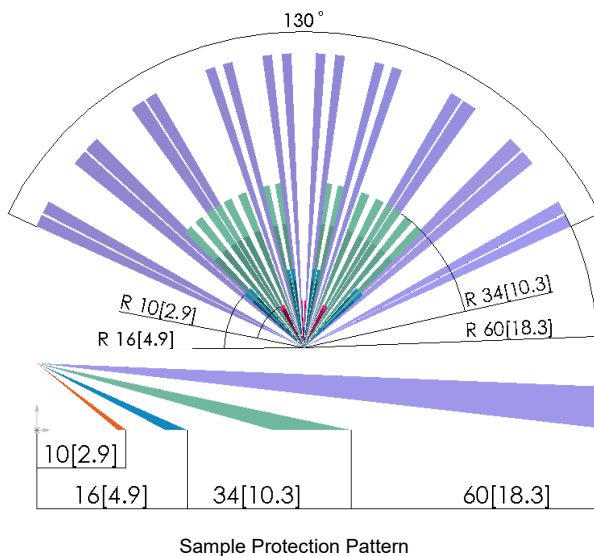
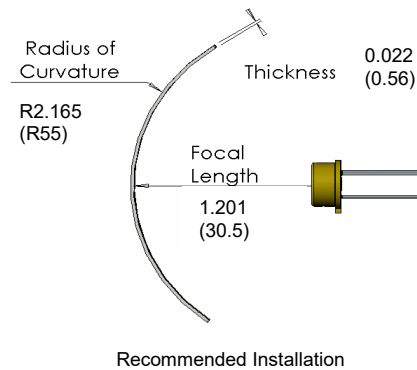


IO8907 (EWA-30.5) Passive Infrared Lens Array

Extra Wide, Uniform Sensitivity PIR Lens

The EWA-30.5 is a Fresnel lens array that is designed for Passive Infrared (PIR) sensor applications. This lens can be used in applications involving security, lighting controls, and environmental controls where an extra wide detection pattern is required. The lens is designed for uniform sensitivity, which means that each zone has approximately the same sensitivity as the others, and the total electronic gain of the sensor can be minimized. It features a 130-degree field of view and a short focal length that makes it well suited for compact, low profile sensors.

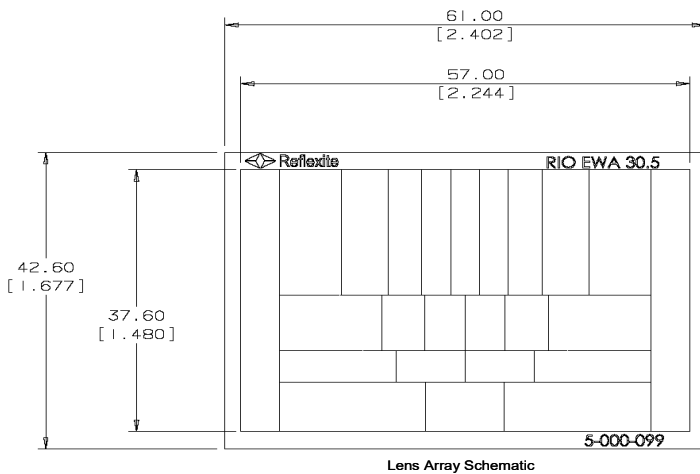

Specifications:

- Part #IO8907
- Range: 60 ft. (18 m)
- Field of View: 130
- Installation Height: 7
- Focal Length: 30.5 mm
- Material: HDPE
- Extra wide protection pattern
- Colors: White and Natural
- Optimized for dual element pyroelectric devices
- Uniform sensitivity for improved sensor efficiency
- White light immunity to reduce false triggers
- UV resistant for outdoor applications
- Dimensions are in inches (mm)

Empire Precision Plastics

500 Lee Road, Suite 400
 Rochester, NY 14606
 585.454.4995